


Meeting Room Heating Control

STEP 1:

To switch the heating on

Press arrow up \blacktriangle button on the wall stat until It goes to 30 degrees

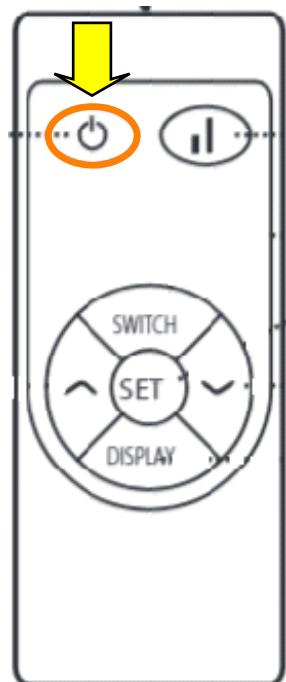


STEP 2:

Use the remote control to switch on each of the heater one by one.

Point the remote at the screen on the heater.

Press the power button on the top left hand side of the remote to switch it on.


Then repeat the process.

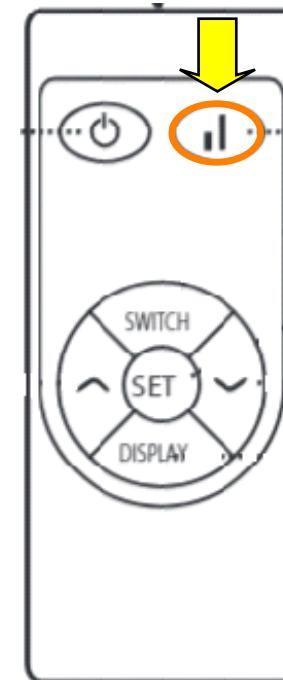

STEP 3:

Use the remote control to change the heat setting from low to high, by pressing the top right hand button.

You will need to do this with each heater, by pointing the remote at the screen on the heater, this will then heat up to the preset heat setting within the heater. You will see a Sun go from half full to full.

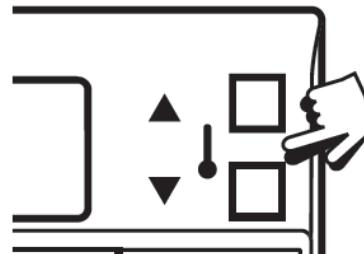

STEP 4:

To switch the heating off

Press arrow down \blacktriangledown button on the wall stat until It goes to 5 degrees.

Please switch off the heating after your booking.
Save Energy. Many thanks