


## Hotpoint Aquarius Dishwasher FDW20

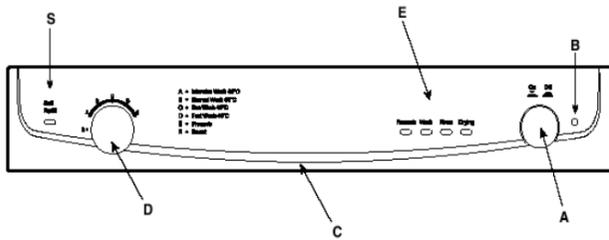

**A)** ON-OFF Button Press this button to switch the appliance on.

**B)** ON-OFF Indicator light This light informs you that the dishwasher is on.

**C)** Door opening handle Use this handle to open the door.

**D)** Cycle phase indicator light These indicator lights inform you which cycle phase is underway (prewash, wash, rinses, drying)

**E)** Low Salt indicator light This light warns you that it is time to add more salt.

### The detergent

#### Adding detergent

To open lid A, press button B. The detergent should be put into the two containers C and D. If using a tablet, put it in container "D". Now you can close the lid: press it down until you hear it click.

#### If it won't close

Check whether there is any detergent residue on the edges of the dispenser. Remove the excess.




- Use the right amount of detergent (see programme chart).
- Store your detergent and rinse aid in a cool, dry place, safely away from children.

### Rinse aid.

Rinse aid makes dishes sparkle more as it improves their drying. The rinse aid container is situated on the inside of the door. You should fill the rinse aid container when indicator D lights up to show you it is empty.

#### Adding rinse aid.

To open the dispenser, turn cap C anticlockwise. Take care when you pour in the rinse aid to avoid it overflowing. You can regulate the amount of rinse aid used by the dishwasher, move the adjuster F which you will find under lid C.

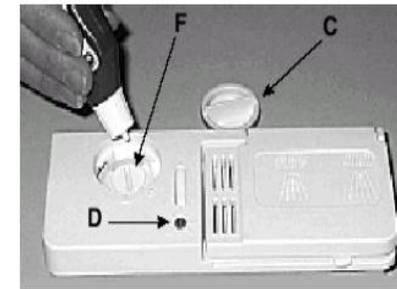

You can choose from six different positions. It is normally set to 4.

- The amount of rinse aid needs to be increased if the dishes appear dull or you can see circular stains.
- The amount of rinse aid needs to be reduced if the dishes are sticky or you can see white streaks.

**Dishwasher Programme Chart** Select the most suitable programme for the type of dishes and how dirty they are. To select the wash programme see the chart below:

CYCLE	CYCLE SELECTION INSTRUCTIONS	CYCLE DESCRIPTION	DETERGENT FOR PRE-WASH & WASH	RINSE AID	WASH CYCLE DURATION (Estimate in minutes)
<b>A) INTENSIVE WASH</b>	Very dirty dishes and pans (NOT to be used for delicate items)	Pre-wash with hot water at 40°C Wash at 65°C 2 cold rinses Hot rinse at 70°C Drying	5 + 25 g	*	120
<b>B) NORMAL WASH</b>	Cycle for normally dirty pans and dishes. Standard daily cycle.	Wash at 55°C Cold rinse Hot rinse at 70°C Drying	30 g	*	88
<b>C) ECO WASH</b>	Environmentally friendly cycle, with low energy consumption levels, suitable for normally dirty pans and dishes.	2 cold pre-washes Wash at 45°C Hot rinse at 65°C Drying	5 + 25g	*	145
<b>D) FAST WASH</b>	Economic and fast cycle to be used for slightly dirty dishes. Run cycle immediately after use	Short wash at 40°C Hot rinse at 62°C	25g		25
<b>E) PRE WASH</b>	Preliminary wash cycle for dishes while awaiting completion of the load with the dishes from the next meal.	Short cold wash to prevent food from drying onto the dishes.			12

Select the right wash cycle for your dishes. Selecting the most suitable wash cycle for the load ensures clean dishes and a more economical use of water and electricity. \* Use Rinse Aid.

**Please let the dishwasher cycle finish in full for it to drain correctly.**